


# Basic Install Guide

For TD-W9970 Modem Router



## Connecting the Hardware

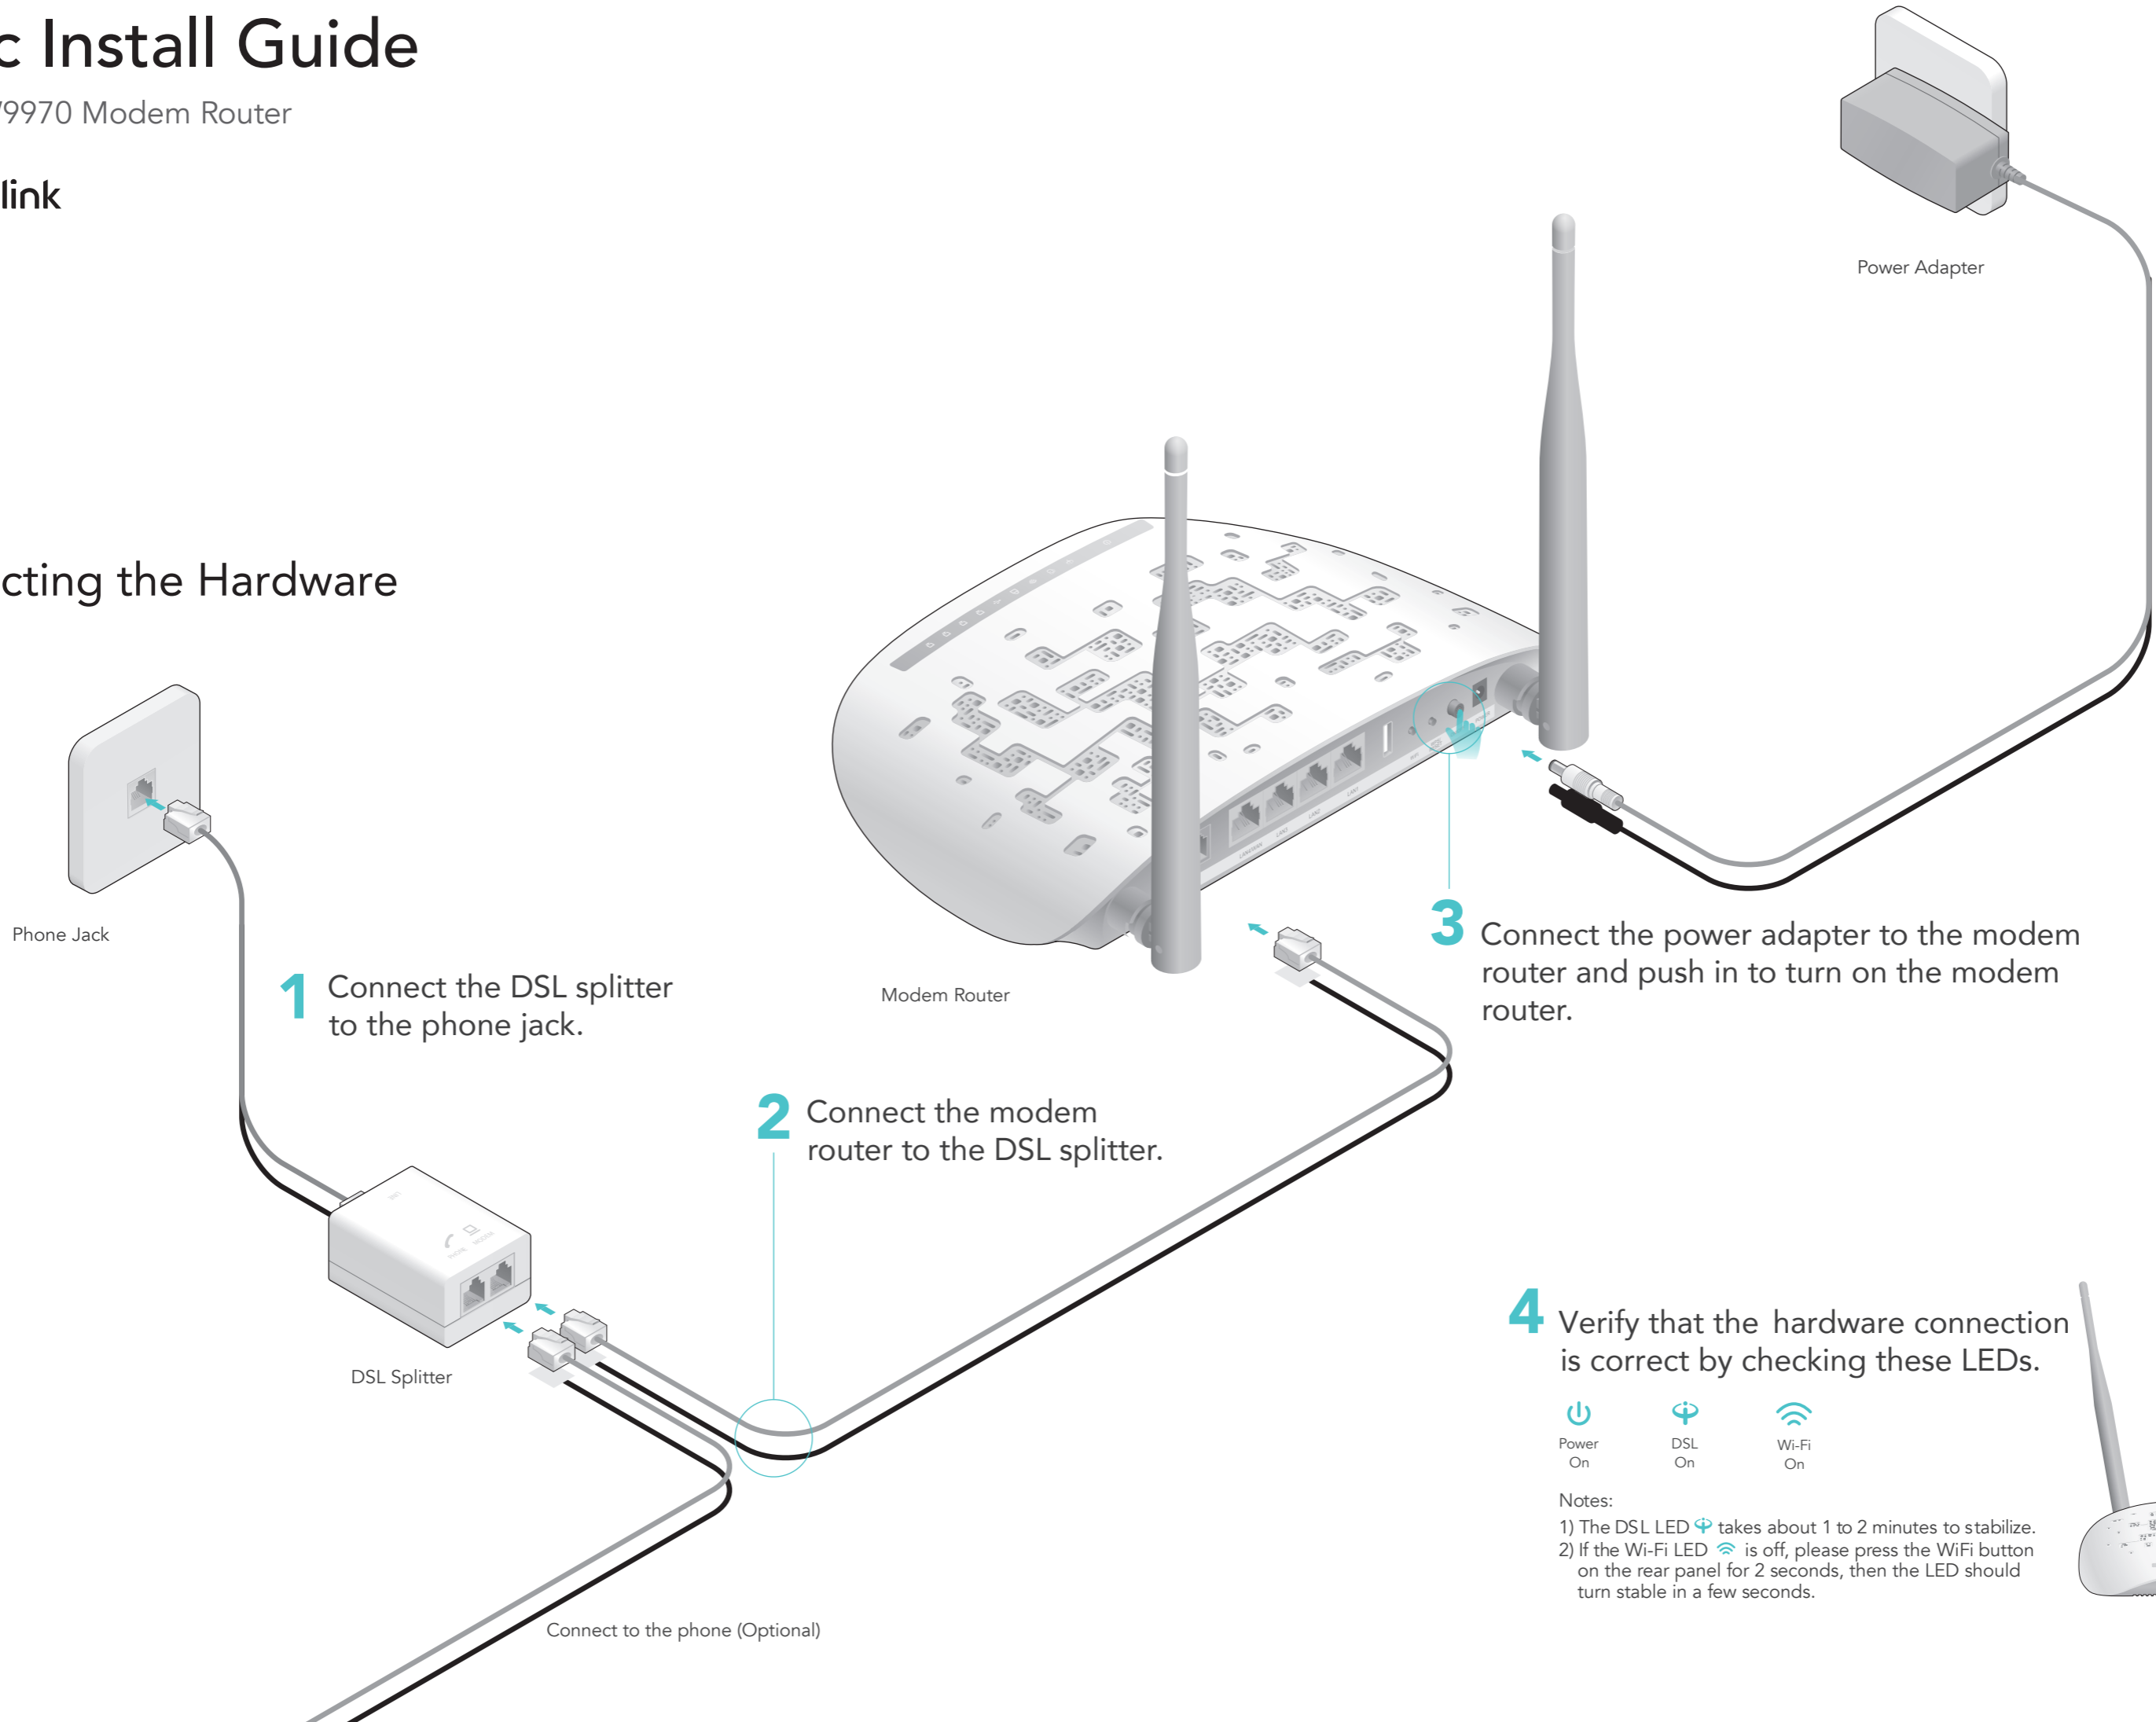

**1** Connect the DSL splitter to the phone jack.

**2** Connect the modem router to the DSL splitter.

**3** Connect the power adapter to the modem router and push in to turn on the modem router.

**4** Verify that the hardware connection is correct by checking these LEDs.



Notes:  
1) The DSL LED takes about 1 to 2 minutes to stabilize.  
2) If the Wi-Fi LED is off, please press the WiFi button on the rear panel for 2 seconds, then the LED should turn stable in a few seconds.

